

Installation of the Ridge Freestanding clawfoot tub Water Supplies with Stops


All supply lines should be installed by a qualified, licensed plumber.

Supply lines are made from high quality cast brass. These lines cannot be bent to vary the spread at the floor. They need to be installed to the same width as your faucet or your faucet needs adjustable arms on it.

Be sure and install the support bracket on the supply line before you tighten the riser to the stop.

The bottom 7 inch extension need not be installed if your height does not match your tub.

Avoid over-tightening all connections. Snug the nuts by hand then by using a crescent wrench, tighten 1/4 turn more. Check for leaks. Tighten 1/8 of a turn until leaks stop. Be careful as all brass will crack or split if over tightened.

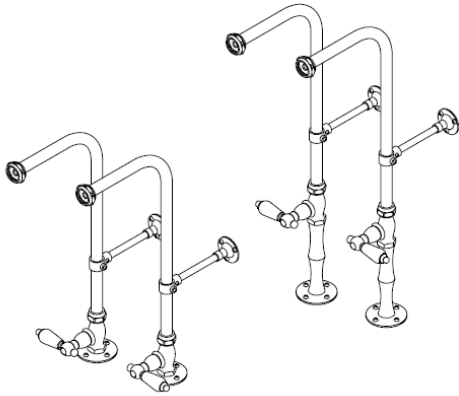

www.colorcraft.us

Total height is about 31 inches

